

1

BEFORE YOU INSTALL

Consider the optimal location to wire the tracker into your vehicle or equipment. You must have access to a power source. Typical vehicle placement is underneath the dashboard, under a seat, or in the glove box. Avoid under the hood or in the trunk.



2

CONNECT YOUR TRACKER

 
Wire the PWR interface by connecting the black wire to ground, and the red wire to power. For ignition detection (optional), wire the orange wire to the RUN position of the vehicle's ignition switch. The TTL, EXT, and SOS interfaces are not supported/needed for general use.



3

DOWNLOAD THE TRACKING APP

Download the mobile app from the App Store or Play Store by searching for 'logistimatics'.



4

LOGIN & ACTIVATE

Log into the app with your email address and the password you set up when you purchased your tracker. Next, you will find your tracker in the menu, choose a subscription plan, and activate.



Add Users

To create additional users for your account, you must do so in the web version of the tracking app: gps.logistimatics.com. In the web app, navigate to Account > Manage Users.



Setting Up Alerts

To be notified if your tracker enters or exits an area, first create a geofence. In the mobile app, click Geofences > New Geofence. Give your new geofence a name, address and size.



Save Reports

Reports allow you to preserve tracking history in your app. Log into the app and select Reports from the menu. Select a tracker and date range to create a report.



Troubleshooting

If the tracker does not report location after installation, confirm that the power wire from your vehicle/equipment has power by using a voltmeter.

Additional Information

1 Reporting Frequency

The Road Wired GPS tracker will report its location every 400 meters when moving by default. There is also an option in the commands section of the app to have the tracker report every 30 seconds when moving.

2 Engine Runtime OPTIONAL

To receive data based on ignition and engine runtime, connect the ORANGE wire to the RUN position of the vehicle's ignition switch. Avoid wiring the red and orange wires together for proper functionality of this feature.

3 4G Connectivity

The Road Wired GPS tracker works on 4G cellular networks. Once the device is wired in, it will report location in most parts of the US. The tracker will lose signal if surrounded completely by metal, or inside of a parking garage.

4 Historic Locations

You can view the Road Wired's historic locations within the tracking app. In the mobile app, select the CLOCK icon on your tracker's map. For easier viewing, use the web app found at Logistimatics.com to look back at historic tracking.